



Black and Decker PS1800 Case Replacement

This guide will illustrate how to open the outer case of the Black and Decker PS1800.

Written By: Christian Aldrich



INTRODUCTION

This guide will illustrate how to open the outer case of the Black and Decker PS1800.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Case



- Flip device over so that the screw holes face up.
- Use the Phillips #00 screwdriver to remove all six 18mm Phillips screws.
- Use the Phillips #00 screwdriver to remove the single 12mm Philips screw.

Step 2



- Remove one side of the Clamshell.

